



①打开包装

open package



拿出脚架和书网拉杆

take out the feet shelf and the
net rod



②装转芯重要提示:

important tips for installing the rotating core

折叠桌安装流程

传递轴片孔位朝上



冲孔位置朝上

②装转芯重要提示：

the punching position of the rotating shaft is upward







内六角对准孔位

the inner hexagon is aligned
with the hole position



转芯卡紧

make the rotating core chucking



把拉杆套进转芯卡紧

insert the tie rod into the rotating
core and clamp it tightly



试下旋钮折叠是否正常
check to see if the spin fold works



用内六角扳手锁紧孔位

use an Allen wrench to lock the holes



同样的方法装好另一边

use the same method for the
other side feet shelf



记得听到“咔嚓”一声

remember to hear a click



即对准锁紧了

if that, it is lock in alignment



再试下两边旋钮

try the two knobs again




折叠是否顺畅

whether the folding is smooth



脚架装好后开始装台面

when the feet shelf is in place,
start to install the table top

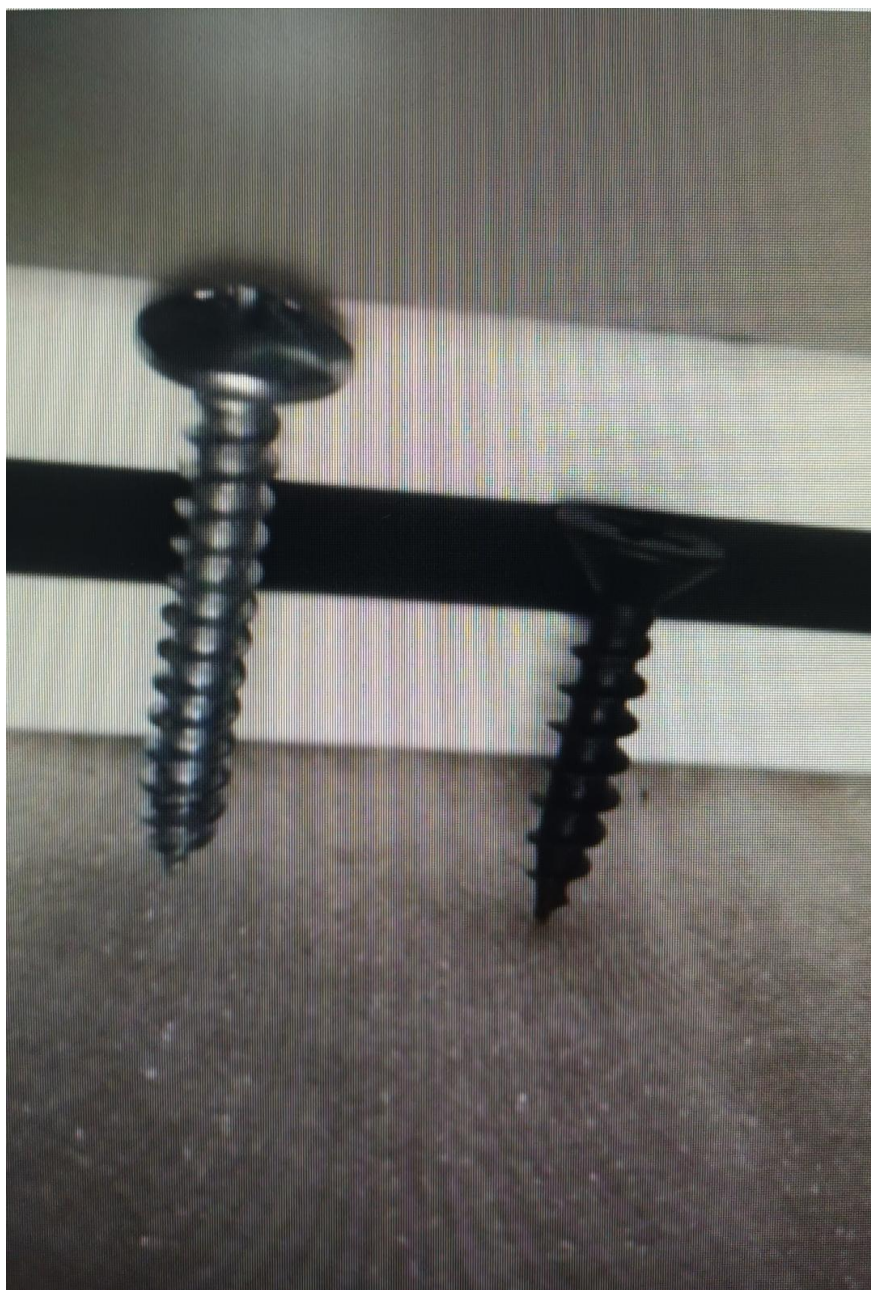

the black screws are for the table top



可把台面平放地上

countertops can be placed flat on the floor (or in a flat, spacious area)



以1200*550台面为例
for example, 1200 x 550MM
desktop

6 black screw



台面托前后左右均分

countertop bracket are evenly divided
between front and back, left and right

折叠桌安装流程

台面顶托

countertop bracket



2 black screw



装好顶托

install the top bracket



锁紧台托螺丝①

lock table bracket screw 1



锁紧台托螺丝②

lock the table bracket screws 2



锁紧台托螺丝③

lock the table bracketscrews 3



锁紧台托螺丝④

lock table table bracket screws 4



开始组装书网托

begin to assemble the booknet
bracket

8 black screw



1根

first one tube



2根

the second tube



3根

the third tube



4根

the fourth tube



另一边分别对好孔位

the other side align the holes



装好后敲紧

once installed, make it knock
tightly



一定要两头敲紧！！

make sure it's knock tight on
both sides



each tube of the book network
bracket should be locked with
screws

书网托架每根管都要



固定在台面上

then the book network bracket
is fixed on the table top



同样锁紧螺丝

also lock the screws

2 black screw
2 small steel screw






4 flat steel screw
4 small steel screw







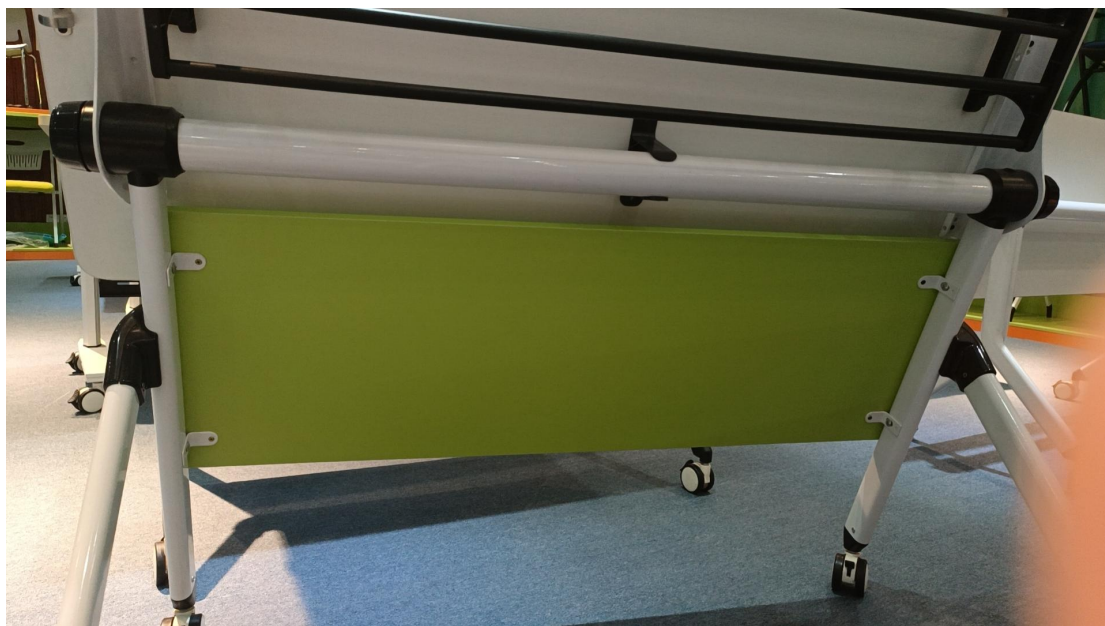



baffle exposed baffle "ears" 4.5 cm on the line



螺丝固定

the baffle is centered above and below "the ear"



螺丝固定

screw fixation



至此整个桌子

at this point, the table is
installed



试下旋钮折叠顺畅与否

test the knob to see if it folds
smoothly



正常

if it is normal, it is complete



installation of connection tools

6 black screw



put the left screw retaining plate
into the movable buckle

把左边螺丝固定盘放入活动扣内



put the two accessories together
and rotate the left movable
buckle can be to lock

把两块配件拼接旋转左边活动扣可锁住







This fixture will not be install but the item are given as spare in case you need it but is not necessary.

To install, it require chosen table both put on the flat surface and install as seen on the video. Table A+B can but C maybe not possible if they are not chosen. Like a marriage that need register to consider as married.

In short, Table A,B,C and so on...need to lay flat to install the joint and all together to get it right. Other table may not able to join as the joint only consider those who match marked them will join easily.



tables put together, clockwise
knob left activity button connect
on the right button slot

桌子合拢，顺时针旋钮左边活动扣
卡上右边扣槽即可







Note: keep the desktop at the same level before closing buckles

注意桌面请保持同一水平位置才可扣上